





wymiary:

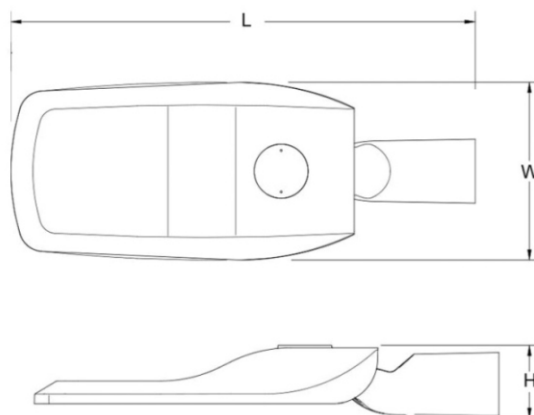


	L	W	H
421	561	214	88
521	679	281	90

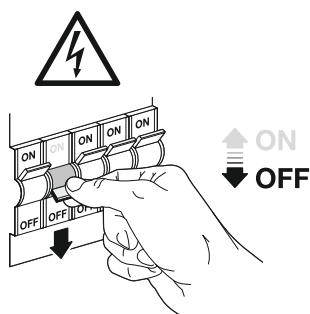

Przed rozpoczęciem montażu należy wyłączyć zasilanie!

Przed rozpoczęciem montażu należy wyłączyć zasilanie!


1. Przykręcić uchwyt do oprawy
2. Ustawić odpowiedni kąt nachylenia oprawy i dokręcić z odpowiednią siłą
3. Wykonać podłączenie elektryczne do wyprowadzonego przewodu z oprawy:
N - neutralny - kolor niebieski,
L - fazowy - kolor brązowy,
PE - ochronny - kolor żółto-zielony;
DA+ - sterowanie DALI+
DA- - sterowanie DALI -
Zalecamy zastosowanie hermetycznych złączy np. Złącze IDC 3M Scotchlok 314 lub inne
4. Założyć oprawę na wysięgnik i dokręcić z odpowiednią siłą
5. Po zakończonym montażu można włączyć zasilanie.

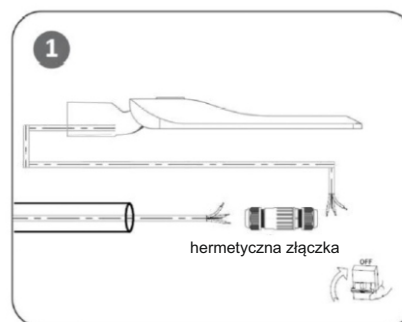

zalecamy użyć np.
Złącze IDC 3M Scotchlok 314




lub inne

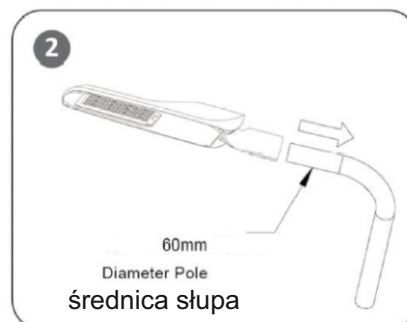

opcjonalnie średnica
48mm - D48

w standardzie 60mm

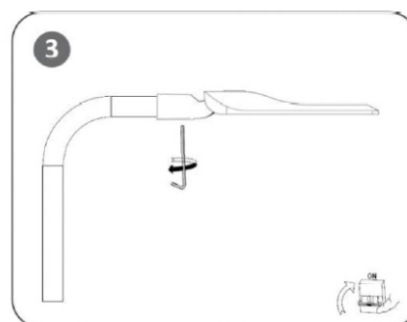

dokręcić
z odpowiednią siłą!

Podczas montażu zabrania się naciskać na maskownicę!



Instalować oprawy mogą jedynie osoby do tego przeszkolone i posiadające odpowiednie uprawnienia.

Producent ma wyłączne prawo do modyfikacji swoich wyrobów.


Producent nie ponosi odpowiedzialności za uszkodzenia wynikłe po modyfikacji wyrobu lub powstałe w wyniku montażu niezgodnie z instrukcją.

Installation instructions

Name luminaire:
IRIS

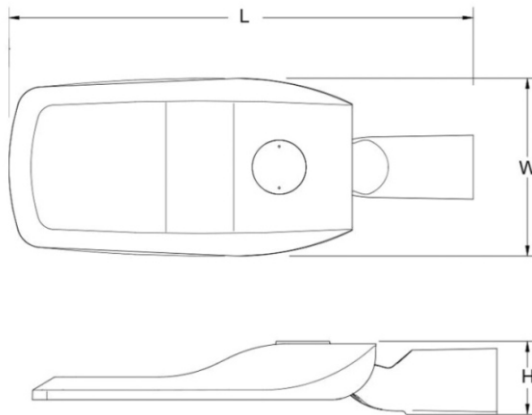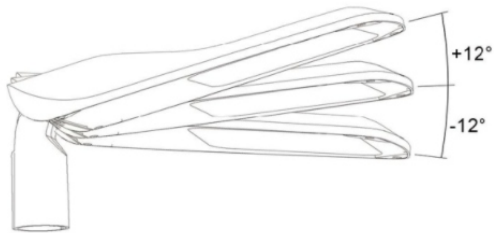

	L	W	H
421	561	214	88
521	679	281	90

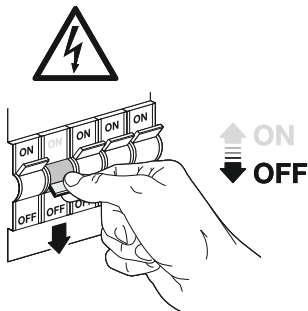

Before starting installation, turn off the power!


1. Screw the holder to the luminaire
2. Set the appropriate angle of the luminaire and tighten with the appropriate force
3. Make the electrical connection to the wire coming out of the luminaire:

N - neutral - blue,
L - phase - brown,
PE - protective - yellow-green;
DA+ - DALI+ control
DA- - DALI control -

We recommend using hermetic connectors, e.g.

IDC 3M Scotchlok 314 connector or other


4. Place the luminaire on the arm and tighten with the appropriate force
5. After the installation is complete, you can turn on the power.

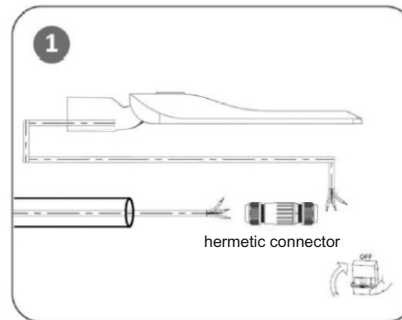


we recommend using e.g.
IDC Connector 3M Scotchlok 314



or other

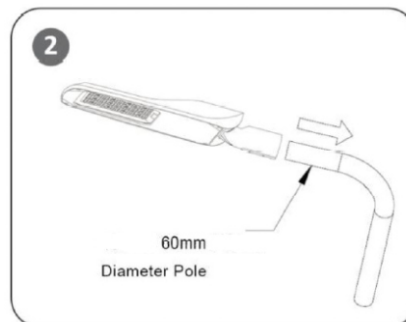

optional diameter
48mm - D48
as standard 60mm

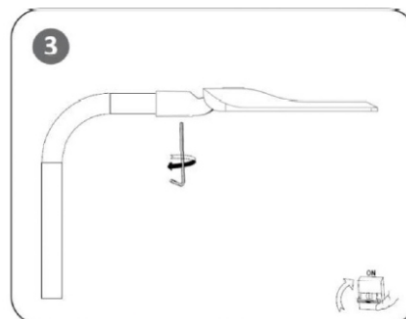

tighten with
appropriate force!

During installation, it is forbidden to touch the LED diodes or press on the cover!

Only persons trained and authorised may undertake luminaires installation. Only the manufacturer has the exclusive right to modify their products.

The manufacturer is not responsible for any damages resulting from modifications made to the product or arising from installation not in accordance with the instructions.